I GENERAL AND INTRODUCTORY

The Gates SA-39A Limiting Amplifier is a high quality low distortion amplifier for AM and FM to be used as a device to limit the audio output above a set amount with said limitation possible without affecting the quality of broadcast transmission. It is constructed in the new type cast aluminum service housing with drop-down front panel. When properly installed it will give a lifetime of satisfactory service. However, as limiters require more than normal understanding of their functions we urge even the very experienced engineer to thoroughly acquaint himself with these instructions and the equipment.

II DETAILED DESCRIPTION

- 1 The SA-39A limiter is a three-stage all push-pull amplifier using highly shielded components for low noise and accurately designed parts for good balance and low distortion. The first stage employs a pair of 1612 (6L7) tubes, the second stage a pair of 6SJ7 tubes and the final stage a pair of 6V6 tubes.
- 2 Limiting Circuit To obtain limiting or automatic peak control action a portion of the output voltage is rectified by a 6H6 tube as a full wave rectifier and a negative DC voltage applied to the second control grid of the 1612 tubes. As the audio voltage increases the grid becomes more negative retarding the flow of current thus lowering the gain of the stage. A-3984 shows the curve of the limiting action obtained. It will be noted that beyond the point where limiting action starts that the curve is substantially flat and up to the overload point of the amplifier only slight increase in gain is noted. Regardless of the amount of limiting action (up to overload) the quality of the program is unimpaired. Referring to the schematic D-20773 the point of limiting is determined by the network R30-R29-R28 and R27. This has been arbitrarily set in design for convenient operation. The scale on the meter, Ml, is to measure the plate current of VI and calibrate it for a direct indication of limiting action. For convenience the scale is calibrated in "Decibels Compression". Switch Sl sets the recovery time as desired. An attenuator, Rl, is inserted in the input to control the input level and set the gain to the desired degree of compression. The output, as indicated from the curve in Drawing A-3984, must be maintained at a comparatively constant level, hence an output attenuator R24, is provided to set the proper level to succeeding equipment.
- An electronically regulated power supply maintains constant voltage on the first two stages. This circuit employs a 5V4G cathode type rectifier which will relieve initial surge voltage on the input filter capacitor. As a further aid to keeping the equipment in service the capacitor is a plug-in type which may be readily kept in stock for immediate replacement. The conventional regulator circuit uses a 1-6X5, 1-6SJ7, and 1-6I6G tubes.
- 4 Mechanical Construction
 The amplifier is built upon a flat plate chassis. This in turn is mounted in a cast aluminum frame with a drop front door which may be mounted in a standard 19" rack or cabinet. Necessary controls and the meter are located on the front door. The tubes are available from the rear and opening the door gives access to the electrical components. By removing the controls from the front door the chassis may be removed from the frame for major repair without removing the style strips from the cabinet. A pilot light inside the frame will provide illumination when powered from an external 6.3 volt source through a plug provided.

1 - Unpacking

The SA-39A Limiting Amplifier is shipped as an integral unit completely assembled. The rectifier tube and the plug for the trouble light are removed for packing. A check of the packing list will show exact contents of container. The remaining tubes are shipped in their respective sockets. Remove any padding or tape added to safeguard delivery. Open the front door by loosening thumbscrew. Inspect the interior for additional packing materials as well as concealed damage due to rough handling by the transportation agency. Insert the rectifier tube in its socket and check the remaining tubes that the proper tubes are in the sockets as stencilled.

2 - Installation

Fourteen inches of rack or cabinet space must be provided for the amplifier. The 115 Volt A.C. terminals will be found on the left side (from the rear) of the chassis. The audio connections are on the right side. The terminals are stencilled with their function in each case. The input and output impedances are 500 ohms into and out of resistive attenuators. Reference to the schematic diagram will clarify the terminations. Care should be taken that all audio leads are run in shielded pair and kept away from 60 cycle A.C. lines as far as possible. Due to the cast aluminum frame and aluminum chassis little trouble should be encountered from stray R.F. fields. It is suggested that if possible the ungrounded side of the A.C. line be connected to terminal number 8 (stencilled on under-side of chassis) then when the fuse is removed the cntire chassis will be at neutral or ground potential and danger of accidental shocks removed when it is necessary to work on the equipment.

CAUTION: If the above precaution is not taken, remember that the A.C. switch on the front door is liable to be live even with the fuse removed, and to work accordingly.

IV OPERATION

1 - Preliminary Adjustments

The instrument has been carefully checked in the laboratory under actual operating conditions and should be ready for operation as described below without further adjustment.

2 - Initial Operating Procedure

To place the SA-39A Limiting Amplifier in operation set the front panel controls as follows:

- 1 Set "Input" attenuator Rl to infinity. The amplifier should operate with a constant input of approximately -20 V.U. However, it is suggested that a level of -10 to O V.U. be maintained at the terminals and the input attenuator adjusted to proper operating level.
- 2 Set "Output" attenuator R24 to infinity.
- 3 Turn on the power switch, S2. The pilot light should light up. If not check fuse on rear of chassis.
- 4 With the Input attenuator at infinity or off, the DB Compression scale should show 0 DB Compression or full scale reading. To adjust the meter open the front door and a knob, R3 will be noted in the lower left hand corner of the chassis. This knob controls R3 changing the bias slightly on the 1612 stage to adjust the plate current so that the meter reads 0 DB Compression. It may be found that after the limiter has been in operation

an hour or two that the zero setting will change; the needle dropping slightly. It is suggested that the setting be rechecked after complete warm-up and this setting be used for continuous service.

- 5 Now, increase the program input until the meter just begins to swing with peaks, this is the minimum level that the limiter should be operated. For satisfactory operation "average" program level should not be allowed to compress beyond 5 DB. At this point it should be pointed out that the scale indicates a steady sine wave compression and that dynamic program material will have a different behavior with a higher degree of compression than actually indicated on the meter; however, for all practical considerations the meter gives the operator an excellent indication of the operation of the limiter.
- 6 Increase the output gain control until the desired level is reached. The limiter is now ready to be placed in service.
- 3 Operating Suggestions
 Actual operation of the limiter will depend to a large extent upon the individual desires of the personnel involved. The principal reason for the use of a limiter is to permit the transmitter to be operated at a high modulation value with the limiter being a safety valve to prevent sudden or sustained program increases from causing overmodulation. In FM the SA-39A Limiter is indeed ideal; preventing excessive transmitter swing and resultant receiver distortion. Where it would be desired to have considerable dynamic range to the music the amount of compression should be reduced to a minimum. As compression is increased the dynamic range would be compressed to where the music would lose its pleasing expression. Under normal operation the compression should not exceed 5 DB for average program level.

The recovery time of the limiter is set by switch Sl on the rear of the chassis. A dial is calibrated for six positions. Position #1 gives a time recovery of approximately .2 sec. and each succeeding position increases by .2 sec. Position #3 or .6 sec. gives a good average recovery time, however, for certain types of program it may be desirable to increase or decrease the time constant.

The jack J7 on the front door may be used for aural monitoring by plugging in phones. A signal will be heard at this point regardless of the position of the output attenuator.

V MAINTENANCE

The Gates SA-39A Limiting Amplifier is carefully tested in the laboratory before shipping and all controls and adjustments set as indicated in the preceding test. The amplifier has been carefully designed and should give long uninterrupted service. For the assistance of the engineer in servicing the amplifier the various operating voltages are indicated on the schematic drawing. These readings were taken with a high impedance vacuum tube voltmeter. If an ordinary 20,000 ohm per volt meter is used a slight discrepancy will be noted at tube sockets although main voltages should read approximately the same.

A current jack has been placed in each cathode of the amplifier circuit. If a multi-range D.C. milliammeter is available a standard two circuit phone plug may be inserted. The readings should approach those shown on the schematic. The polarity of the jack plug is the same as used on the companion units of the CATES SA line of amplifiers; that is, the tip is positive and the sleeve is negative.

Drawings C-17330 and C-17331 show the locations of the resistors on the terminal boards and their terminations.

The layout of the SA-39A Limiting Amplifier lends itself rapid routine maintenance. With the front door lowered the attenuators are readily available for occasional cleaning.

Modern tube design assures long life; however, it is well to occasionally check the cathode currents, watching for unbalance in the tubes. In changing tubes care should be taken that the 1612 tubes are evenly matched which may be checked by plugging a current meter into jacks J1 and J2. Unbalance may cause fluttering or thumping in the limiter circuit on extreme low notes. It may also be a source of noise (hum) where extremely low level circuits are employed.

Removing the tubes for periodic checking has the further advantage of lowering contact potential between the pins and socket clips. The plug-in capacitor should also be removed and reinserted to insure good contact. Good housekeeping also indicates that all equipment should be kept clean and dust-free.

The output of the regulated power supply is indicated at 275 volts. This voltage may be adjusted by varying R43, a screwdriver slot control located on the rear of the chassis. The voltage will be found to maintain very constant over quite wide variations of current and line voltage fluctuations. In case of minor repairs to the equipment reference to the schematic and resistor board drawings should enable the engineer to make most repairs without removing the chassis from the rack. A new type of terminal has been employed on the resistor boards, allowing easy removal of components by the application of a hot soldering iron. If a major repair is indicated the unit may be removed with the following procedure:

- 1 Disconnect leads from rear terminal boards.
- 2 Remove knobs and lock nuts from the controls and switches on the front door. Also the leads from the meter.
- 3 Remove the filister head screws from the roar of the chassis.
- 4.- Remove the chassis pulling the switches and controls through the frame.
- 5 If necessary the meter may be removed separately and the connections made on the work bench.
- 6 To replace the chassis reverse the process. Stude are provided on the rear of the frame to assist in guiding the chassis to its proper position and to relieve the load while replacing the screws.

SYMBOI.	NO. DRAWING NO.	DESCRIPTION
A1 A2 A3 A4 A5 A6 A7		Pilot Light Assembly, 810M-431, Red, Dial Light Lamp #40 Lamp socket "made from Dial Light #611 Socket" Lamp, 1/4W Neon NE-45 Fuseholder, #341001 Littlefuse Trouble Light Socket, #505 Dial Light Trouble Lamp, #40
C1 C2 C3 C4 C5 C6 C7 C9 C10 C11 C12 C13 C14		Capacitor, .1 mfd., 400V., C-D #DT-4Pl Capacitor, .1 mfd., 400V., Aerovox P82 Capacitor, .1 mfd., 400V., Aerovox P82 Capacitor, .5 mfd., 400V., Aerovox P82 Capacitor, 20-20 mfd., 450V., Plug-in C-D #QC-2245 Part of Cl0 Capacitor, .5 mfd., 400V., Aerovox P82
C16 F1		Capacitor 16 mfd., 450 V. #BR-1645 C-D
J1 J2 J3 J4 J5 J6 J7		Jack, 2-A Utah-Carter Jack, 2-M Utah-Carter Jack, #701 Mallory
Ll	AC-3122	Filter Choke, U.T.C.

PARTS LIST

SYMBOL	NO. DRAWING NO.	DESCRIFTION
ML	A-5743-1	0-1 MADC Neter with Special Compression Scale
R1		Control, 500/500 ohms, Daven LA-350F
R2		Resistor, 510 ohms, 1 W., 5% AB
R3	A-3404-5	Potentiometer, 500 ohms Wirewound 3/4" Shaft
R4		Resistor, 62K ohms 1 W. 5% A-B
R 5		Resistor, 82K ohms 1 W. 10% A-B
R 6		Resistor, 220 ohms 1 4.5% A-B
R7		Resistor, 82K ohms 1 W. 10% A-B
R8		Resistor, 100K ohms 1/2 W. 10% A-B
R9		Resistor, 150K ohms 1 W. 10% A-B
R10		Resistor, 150K ohms 1 W. 10% A-B
Rll		Resistor, 100K ohms 1/2 W. 10% A-B
R12		Resistor, 1800 ohms 1 W. 10% A-B
R13		Resistor, 1800 ohms 1 W. 10% A-B Resistor, 470K ohms 1 W. 10% A-B
R14		Resistor, 82K ohms 1 W. 10% A-B
R15 R16		Resistor, 82K ohms 1 W. 10% A-B
R17		Resistor, 68K ohms 1 W. 10% A-B
R18		Resistor, 68K ohms 1 W. 10% A-B
R19		Resistor, 100K olms 1 W. 10% A-B
R20		Resistor, 100K ohms 1 W. 10% A-B
R21		Resistor, 10K onms 1 W. 10% A-B
R23		Resistor, 180 ohms 10 W. Lectrohm type 1 3/4E
R24		Control, 500/500 ohms Daven LA-350F
R25		Resistor, 270 K ohms 1 W. 10% A-B
R26		Resistor, 270 K ohms 1 W. 10% A-B
R27		Resistor, 100K ohms 1 W. 10,0 A-B
R28		Resistor, 18K ohms 1 W. 10% A-B
R29		Resistor, 470K ohms 1 W. 10% A-B
R30		Resistor, 470K ohms 1 W. 10% A-B
R31		Resistor, 2.2 megohm 1/2 W. 10% A-B
R32		Resistor, 2.2 megohm 1/2 W. 10% A-B
R33		Resistor, 2.2 megohm 1/2 W. 10% A-B Resistor, 2.2 megohm 1/2 W. 10% A-B
R34		Resistor, 2.2 megohm 1/2 W. 10% A-B
R35		Resistor, 2.2 megohm 1/2 W. 10% A-B
R36		Resistor, 5.1 megohm 1 W. 5% A-B
R37		Resistor, 33K ohms 1 W. 10% A-B
R38 R 39		Resistor, 1 megohm 1 W. 10% A-B
R40		Resistor, 4700 ohms 1 W. 10% A-B
R41		Resistor, 10K ohms 1 W. 10% A-B
R42		Resistor, 4700 ohms 2 W. 10% A-B
	,	CA_39A Timiti


SA-39A Limiting Amp.


PARTS LIST


SYMBOL NO.	DRAWING NO.	DESCRIPTION	
R43 R44 R46 R47 R48 R49 R50	A-3404-6	Potentiometer, 10K ohms 4 N. winderstor, 33 K ohms 2 W. 10% A-Resistor, 1500 ohms 10W Lectrol Resistor, "X" value to te deter Resistor, 5600 ohms 1/2 W. 10% Resistor, 5600 ohms 1/2 W. 10% Resistor 4700 ohm, 1 W.,	-B nm type 1 3/4 E mined by tube current A-B A-B
S1 S2	B-11139-7	Selector Switch Toggle switch, SPST, 8280K16 C	- H
T1 T2	AI-3002 AO-3045	Input Transformer U.T.C. Output Transformer	
T3 T4	AF-3097	Power Transformer, Triad #6676 Filament Transformer	- 4
TB1 TB2	J	Terminal Board, 7-142Y Jones Terminal Board, 3-142Y Jones	· .
V1 V2 V3 V4 V5 V6 V7 V8 V9 V10 V11		Tube 1612/6L7/6L7G Tube 1612/6L7/6L7G Tube 6SJ7 Tube 6SJ7 Tube 6V6 GT Tube 6V6 GT Tube 6K5 GT Tube 6X5 GT Tube 6SJ7 Tube 6L6 G Tube 5V4G	
X1 X2 X3 X4 X5 X6		Socket MIP8-T Amphenol	
6/26/51		- 7 -	SA-39A Limiting Amp.


PARTS LIST

SYMBOL NO.	DRAWING NO.	DESCRIPTION
X7		Socket MIPS-T Amphenol
X8		Socket MIP8-T Amphenol
X9		Socket MIP8-T Amphenol
X1.0		Socket MIP8-T Amphenol
X11		Socket MIP8-T Amphenol
XI.Z		Socket MIPS-T Amphenol
X13		Trouble light connector socket, 80-PC2F Amphenol

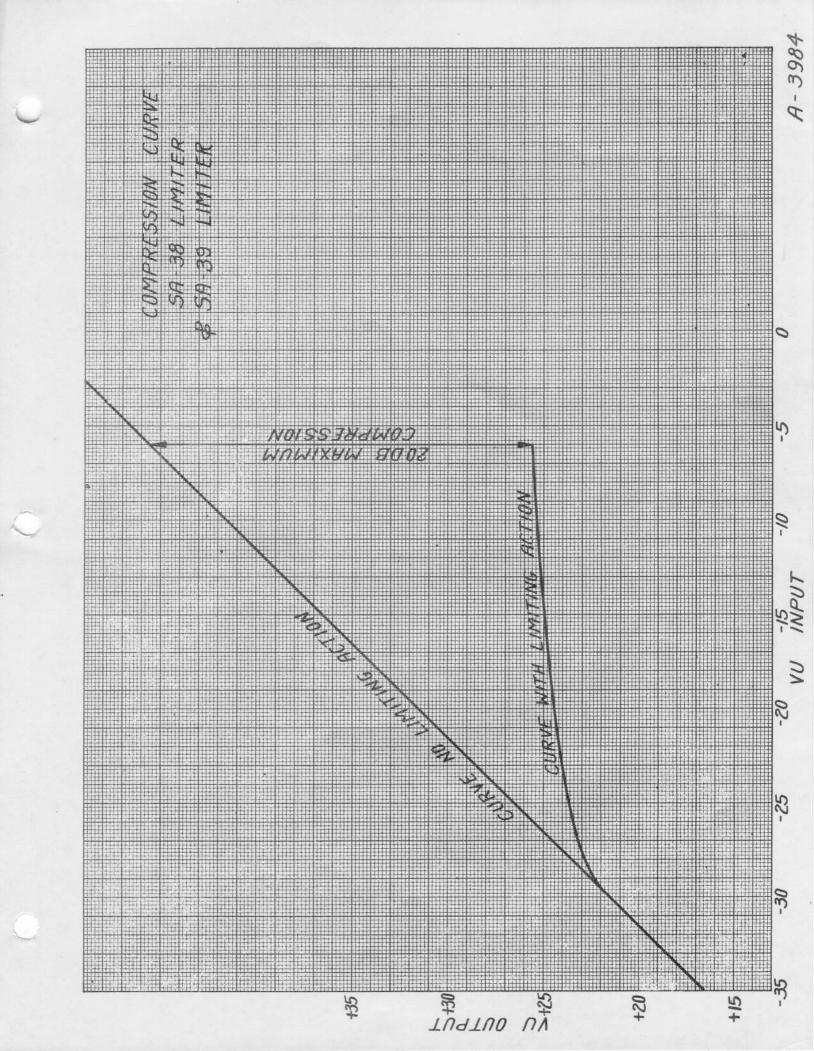

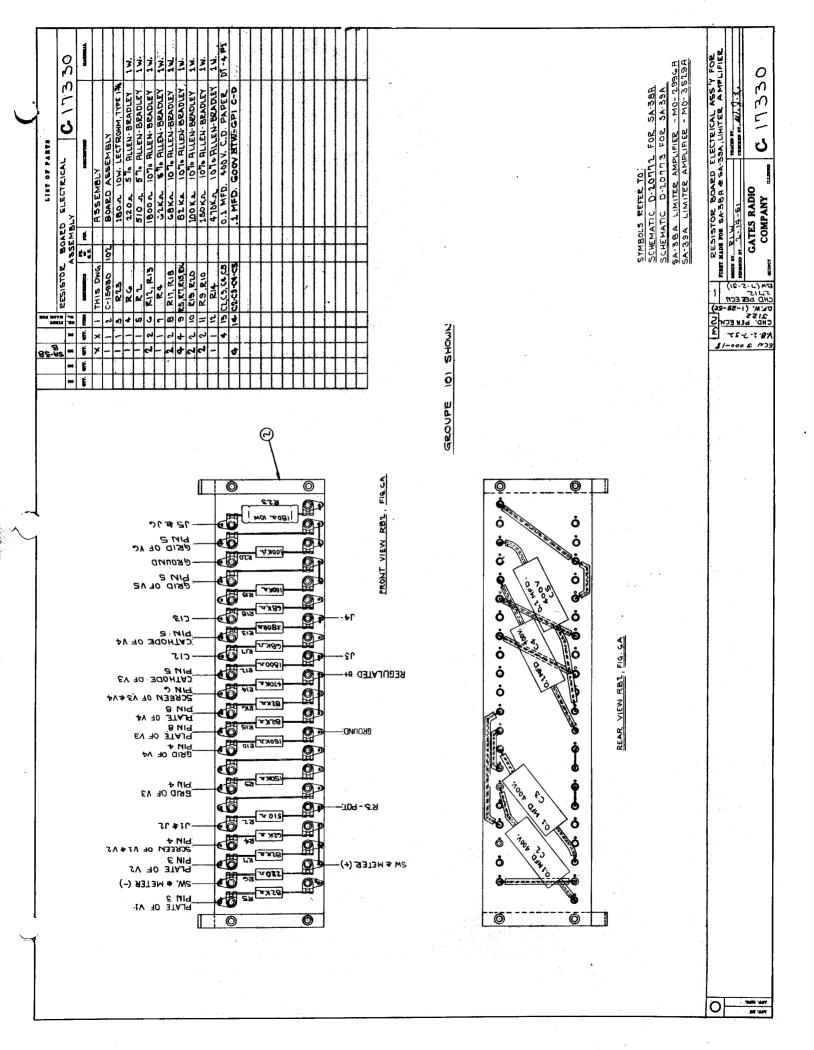

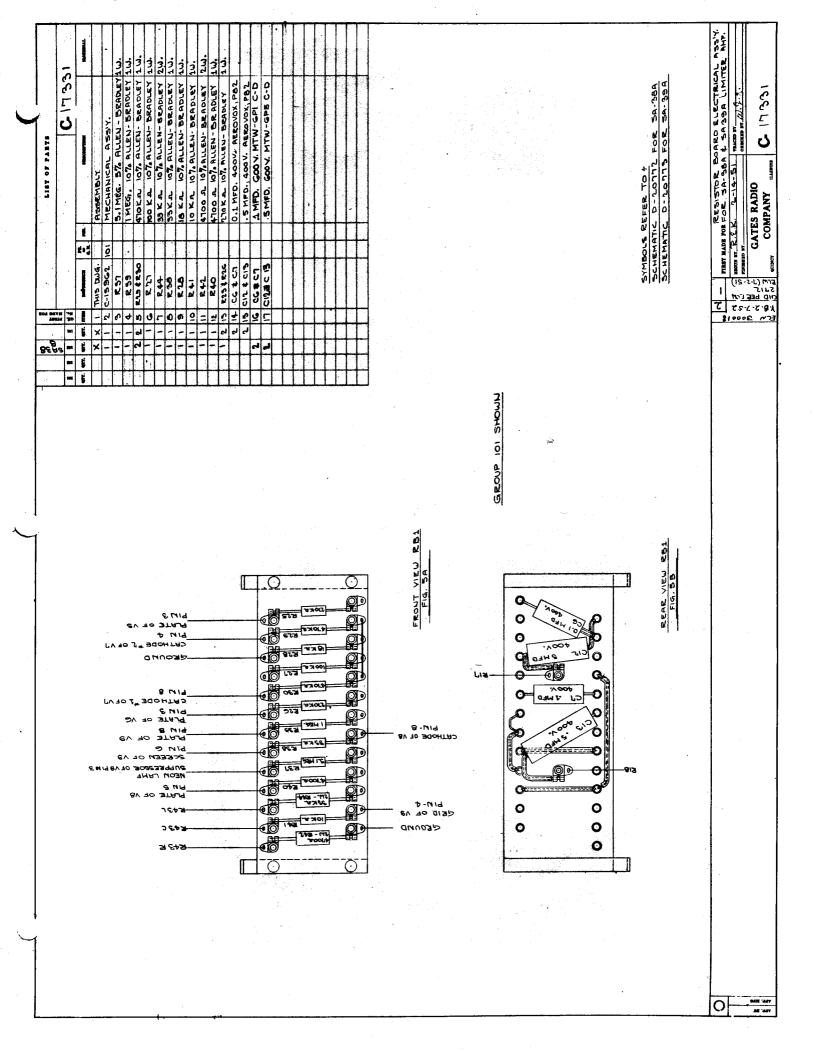

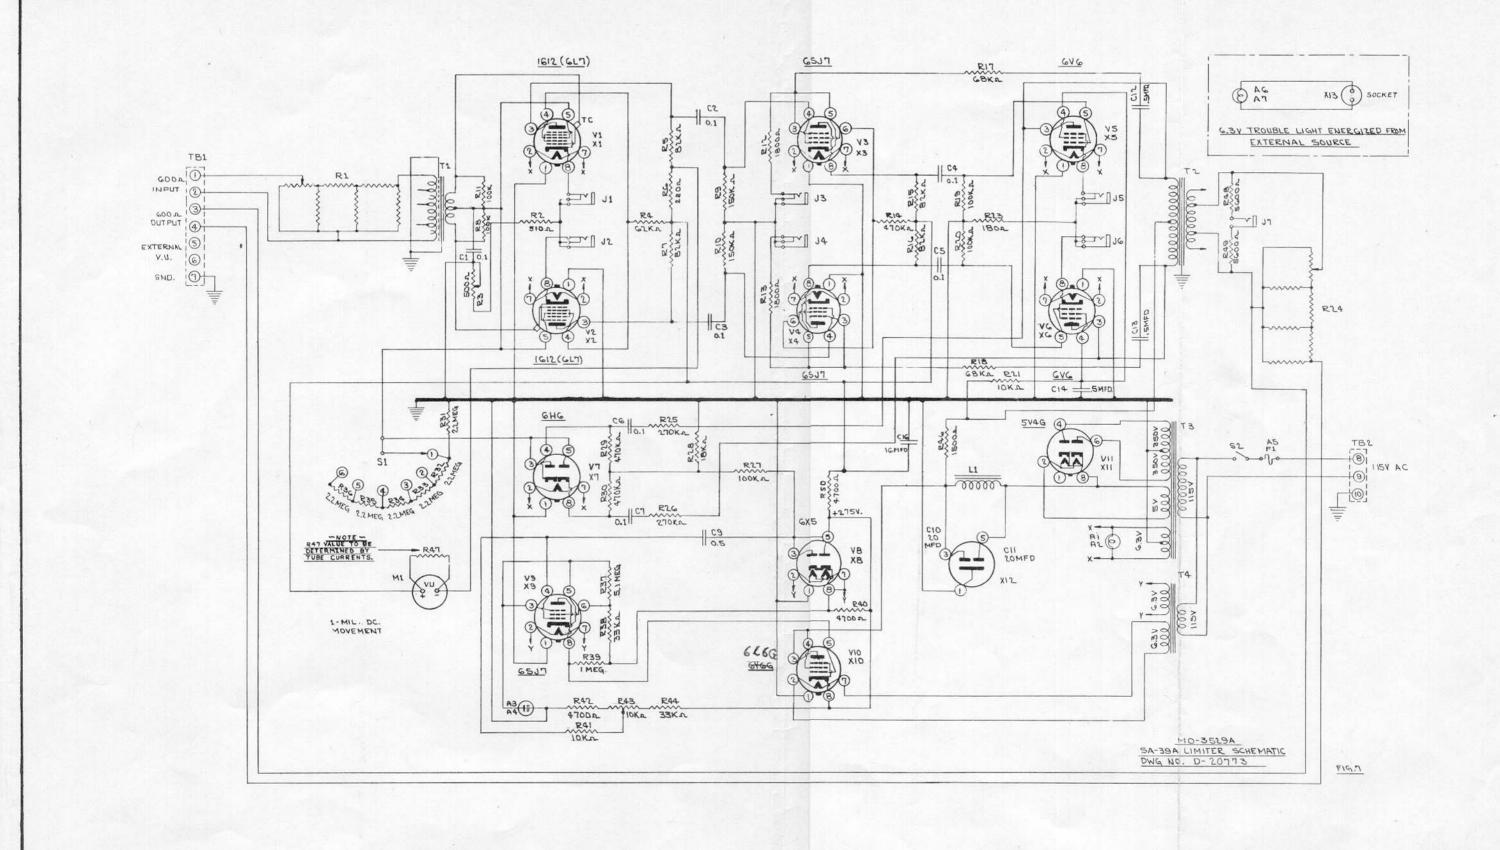

GATES RADIO COMPANY
OUNCY, ILLINOIS

LIMITER SCHEMANC
SA-39 R

MO-35299

ONLY RLW

ONL