



Betriebsdaten:
 Typical operation:
 Exemple d'utilisation:


U_f 6,3 V
 I_f 0,3 A
 I_a . . max 0,8 mA

Prüfdaten:
 Test operation:
 Vérification:

U_f 6,3 V~
 U_a 10 V~

Röhre hat **2 Systeme**.
 Das 2. System ist in
 Stellung **II** zu messen
 2. System is measurable
 in position **II**
 2. System est à essayer
 en position **II**

603

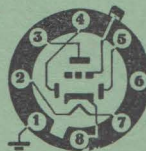

Patent-Röhrenprüfer Modell W19


MAX FUNKE, Adenau-Eifel 2. 55

6Q7	6T7	6V7	6B6	6R7
6 Q 7 G 75 MG 6 Q 7 GT VT-92 6 Q 7 MG VT-92 A	6 T 7 G DH 63 6 T 7 GT DH 63 M	6 V 7 G 6 V 7 GT 6 V 7 M	6 B 6 G 6 B 6 M 6 B 6 GT 6 B 6 S 6 B 6 MG	6 R 7 G VT-88 6 R 7 GT VT-88 A 6 R 7 MG VT-88 B
Triode + Duodiode Karte 602 + Karte 603	Triode + Duodiode Karte 693 + Karte 603	Triode + Duodiode Karte 645 + Karte 603	Triode + Duodiode Karte 604 + Karte 603	Triode + Duodiode Karte 604 + Karte 603

Unbrauchbar
mauvais / Bad

?

G u t
Good / Bon



1 mA